



## 4 Series ExactApply Sprayer: With Load Command

**Bulletin:** SPRAY21.4EA-WL

**Models:** R4023, R4030, R4038, R4044, R4045, & R4060

1. For high flow solution pump machines: verify that the flowmeter valve is in the OPEN position.
2. Fill rinse tank with fresh water.
3. **Machines equipped with Solution Command System (Automated Solution Control):**
  - a. Perform a system rinse. (See Operate Rinse System in the Solution Command System Operation section of the machine Operator's Manual.) The following systems are rinsed:
    - Eductor
    - Agitation
    - Bypass
    - Solution Tank
    - Boom

*NOTE: When rinsing eductor, operator must manually open eductor rinse and sump valves when display shows that portion of the rinse cycle.*

  - b. After rinse procedure is complete, unfold boom, and spray rinse solution in a safe location where contamination cannot occur.
4. **Machines equipped with Manual Load System:** With the solution pump running, manually actuate the following functions:
  - Eductor—During the “eductor” portion of the system rinse, use the manual rinse valve at the eductor to rinse the eductor bowl with winterizer fluid. Then use the eductor manual valve to suck the hopper empty of winterizer fluid and put it into the solution tank.
  - Agitation—activate for minimum of 10 seconds.
  - Bypass—activate for minimum of 10 seconds.
  - Solution Tank Rinse—activate for minimum of 10 seconds.
  - After rinse procedure is complete, unfold boom, and spray rinse solution in a safe location where contamination cannot occur.
5. Use boom air purge to remove excess water from the boom.
6. Remove, clean and install fill strainer, boom supply line strainer(s) and flowmeter(s).
7. **Perform a Load Command System Rinse (If Equipped)**
  - a. **Load Command™:** Open the Load Command™ poppet using poppet maintenance menu on the display and drain the water out of the Load Command™ coupler.
8. Drain the remaining water from rinse tank using the rinse tank fill valve.
9. Operate the eductor function and transfer any eductor hopper water to the solution tank.
10. Empty the solution tank water by opening the solution tank fill valve to let the water escape.
11. Empty the rinse tank water by using the boom rinse function and spraying the rinse tank water out until you lose spray pressure at the boom.
12. **Add John Deere Winterizer Solution (Part # N305634)**
  - a. Mix appropriate amount of winterizer solution with 40 GAL of water to protect sprayer against cold temperatures for your area.
  - b. Add winterizer solution to rinse tank

**13. Load Command™ (If Equipped):**

- a. Rinse the Load Command™ system. (See Rinsing Load Command™ in the Load Command™ section of the machine Operator's Manual.)
- b. This will pull the winterizer solution from the rinse tank to rinse Load Command Plumbing and then place it in the Solution Tank.
- c. Once rinse is completed perform a system rinse to winterize all of the plumbing under the tank. Use steps 3 or 4 depending on machine configuration. Skip the final step and move on to step 14.

**14. Machines equipped with ExactApply™:**

- a. Select A + B spray mode. (See Spray Mode in the Boom and Nozzles section.)
- b. Verify that the nozzle turret is positioned with nozzle one, two, or three in the forward position.
- c. Spray the winterizer fluid in the solution tank out of the solenoids using the Nozzle Flow Check procedure until the winterizer fluid is coming out of every solenoid. (See Nozzle Flow Check Test in the SprayStar™ System section of the machine Operator's Manual.)
- d. If Fence Row Nozzles are equipped ensure winterizer is sprayed through them.
- e. Allow the winterizer fluid to spray until the solution tank is almost empty.
- f. Use boom air purge to remove excess winterizer from the boom.