



JOHN DEERE



4940, 30 Series, & Older Sprayers

Bulletin: SPRAY21.OLDER-Series

Models: 4940, 4930, 4830, 4730, 4630, 4920, 4710

1. For high flow solution pump machines: verify that the flowmeter valve is in the OPEN position.
2. Fill rinse tank with fresh water and set the pump to pull from the rinse tank if equipped.
3. **Manual Load System:** With the solution pump running, manually actuate the following functions:
 - Eductor—During the “eductor” portion of the system rinse, use the manual rinse valve at the eductor to rinse the eductor bowl with winterizer fluid. Then use the eductor manual valve to suck the hopper empty of winterizer fluid and put it into the solution tank.
 - Agitation—activate for minimum of 10 seconds.
 - Bypass—activate for minimum of 10 seconds.
 - Solution Tank Rinse—activate for minimum of 10 seconds.
 - After rinse procedure is complete, unfold boom, and spray rinse solution in a safe location where contamination cannot occur.
4. Remove, clean and install fill strainer, boom supply line strainer(s) and flowmeter(s).
5. **Perform a Load Command System Rinse (If Equipped)**
 - a. **Load Command™:** Open the Load Command™ poppet using poppet maintenance menu on the display and drain the water out of the Load Command™ coupler.
6. Drain the remaining water from rinse tank using the rinse tank fill valve.
7. Operate the eductor function and transfer any eductor hopper water to the solution tank.
8. Empty the solution tank water by opening the solution tank fill valve to let the water escape.
9. Empty the rinse tank water by using the boom rinse function and spraying the rinse tank water out until you lose spray pressure at the boom.
10. **Add John Deere Winterizer Solution (Part # N305634)**
 - a. Mix appropriate amount of winterizer solution with 40 GAL of water to protect sprayer against cold temperatures for your area.
 - b. Add winterizer solution to solution tank, be sure to set the pump to pull from the solution tank and then run a system rinse again to get solution through all the plumbing using step 3, skip the final step of spraying the solution and continue to step 11 if equipped, otherwise continue to step 12.
11. **Load Command™ (If Equipped):**
 - Rinse the Load Command™ system. (See Rinsing Load Command™ in the Load Command™ section of the machine Operator’s Manual.)
 - This will pull the winterizer solution from the rinse tank to rinse Load Command Plumbing and then place it in the Solution Tank.
 - Once rinse is completed perform a system rinse to winterize all of the plumbing under the tank, use step 3. Skip the final step and move on to step 12.
12. **Machines equipped with standard boom plumbing:**
 - a. Spray winterizer out the entire length of the boom for at least 15 seconds.
 - b. Close all the nozzle turrets other than those on each end of every spray pipe.

- c. Spray the winterizer fluid in the solution tank out of the open turrets using the Nozzle Flow Check procedure until you see winterizer fluid coming out of every open spray pipe turret location. (See Nozzle Flow Check Test in the SprayStar™ System section of the machine Operator's Manual.)
- d. If Fence Row Nozzles are equipped ensure winterizer is sprayed through them.
- e. Allow the winterizer fluid to spray until the solution tank is almost empty.